



RY115-20

3671 N Dixie Highway, Pompano Beach, FL 33064 * (954) 785-4820 * (954) 785-5001 (Fax)
<http://www.rivaracing.com>

RIVA Exhaust Temperature Sensor By-Pass Chip

Applications: All 1200 Power valve engines (66V)

Warning! Disconnect Battery and turn off fuel before performing work.

NOTE: This is a racing component. It is designed for competition use only. The Yamaha limited warranty does not cover possible failures caused by this component.

1. Locate the exhaust temperature sensor located in the stock exhaust and follow the wire lead to the left side of the electrical box. Using a small flat screwdriver, detach the black plug from holder. **NOTE:** If unsure of location or removal procedures, consult your service manual.
2. Separate the plug halves. Tie off the wire lead going to the exhaust temperature sensor to a suitable location away from moving parts. **NOTE:** If using a Riva Stinger Pipe Kit, this step will not apply.
3. Install the by-pass chip into the female plug halve and reinstall the plug into the holder on the electrical box. Installation is now complete.

Important: Technical Support

For answers to questions about installation or trouble shooting your RIVA Racing Temp Sensor Chip, Contact:
RIVA Racing Tech line @ (954) 247 0705 or your local RIVA Dealer. Tech e-mail www.tech_support@rivaracing.com



RY115-20

3671 N Dixie Highway, Pompano Beach, FL 33064 * (954) 785-4820 * (954) 785-5001 (Fax)
<http://www.rivaracing.com>

RIVA Exhaust Temperature Sensor By-Pass Chip

Applications: All 1200 Power valve engines (66V)

Warning! Disconnect Battery and turn off fuel before performing work.

NOTE: This is a racing component. It is designed for competition use only. The Yamaha limited warranty does not cover possible failures caused by this component.

1. Locate the exhaust temperature sensor located in the stock exhaust and follow the wire lead to the left side of the electrical box. Using a small flat screwdriver, detach the black plug from holder. **NOTE:** If unsure of location or removal procedures, consult your service manual.
2. Separate the plug halves. Tie off the wire lead going to the exhaust temperature sensor to a suitable location away from moving parts. **NOTE:** If using a Riva Stinger Pipe Kit, this step will not apply.
3. Install the by-pass chip into the female plug halve and reinstall the plug into the holder on the electrical box. Installation is now complete.

Important: Technical Support

For answers to questions about installation or trouble shooting your RIVA Racing Temp Sensor Chip, Contact:
RIVA Racing Tech line @ (954) 247 0705 or your local RIVA Dealer. Tech e-mail www.tech_support@rivaracing.com