



**RIVA RACING**  
PERFORMANCE PRODUCTS & ACCESSORIES

**Free Flow Exhaust Kit**  
**PART# - RS16055-01-07**

**– INSTALLATION INSTRUCTIONS –**

**Applications:** Sea-Doo `07~08 215hp RXT/GTX Limited SC

**\*\*\* NOTE: Allow craft's engine to cool thoroughly before performing installation. \*\*\***

1. Remove D.E.S.S. lanyard and disconnect battery cables.
2. Unclip engine coolant overflow tank and remove from engine compartment cross section. Take care not to tip overflow tank allowing coolant to drain. (see illustration #1)
3. Completely loosen the four M8 bolts holding engine compartment cross section in place. Remove both top and bottom halves of engine compartment cross-section support. Leave air intake duct attached to bottom half. (see illustration #2)
4. Remove exhaust hose connecting water box to outlet exhaust baffle on right side of engine compartment and discard. (see illustration #3)
5. At front of exhaust baffle loosen and remove M10 bolt and spacer. Remove and discard exhaust baffle leaving hose previously connecting baffle to exhaust outlet. (see illustration #4)
6. Thoroughly clean water box outlet flange. Install supplied blue silicone coupler halfway onto outlet flange and secure using supplied hose clamp. (see illustration #5) **NOTE: Do not over tighten clamp.** Loosely install OE clamp over silicone coupler.
7. Apply glass cleaner to both ends of Free Flow Tube. Install longer end of Free Flow tube into exhaust outlet hose. Do not secure clamp.
8. Install Free Flow tube into water box outlet coupler completely. Secure clamps at both ends of Free Flow tube. (see illustration #6) **NOTE: Do not over tighten hose clamps.**
9. Replace engine compartment cross section previously removed during Step 3 in reverse order.
10. Replace engine coolant overflow tank and reconnect battery cables.
11. Installation is now complete. Thoroughly inspect engine compartment and bilge for tools, rags, parts, etc. Reconnect battery cables and run craft out of water using flush kit to check for leaks. Check hose clamps for snugness after running.

***Remember, the water belongs to everyone. Please ride responsibly!***

## Technical Support

For answers to questions regarding installation or trouble shooting RIVA Performance Products contact:  
RIVA Technical Support directly at (954) 247-0705 or by e-mail at [tech\\_support@rivamotorsports.com](mailto:tech_support@rivamotorsports.com)

### 90-day Limited Warranty

RIVA Free Flow Exhaust Kits carry a 90-day limited warranty to the original purchaser. They are warranted to be free of defects in materials and workmanship under normal use and service. Customer modified components will be void of warranty. This warranty is limited to defects in the primary components only. Finish and/or wear marks in or on primary components are not covered under this warranty.

RIVA Racing's liability is expressly limited to the repair or replacement of the components contained within or associated with this kit. RIVA Racing agrees to repair or at RIVA's option, replace any defective unit without charge, if product is returned to RIVA Racing freight prepaid within the warranty period. Any equipment returned which, in RIVA's opinion, has been subjected to misuse, abuse, overheating or accident shall not be covered by this warranty.

RIVA Racing shall have no liability for special, incidental or consequential damages or injury to persons or property from any cause arising from the sale, installation or use of this product.

No other warranty, express or implied, including, but not limited to the implied warranties of merchantability and fitness for a particular purpose, applies. Various states do not allow for the limitation of incidental or consequential damages and therefore the above exclusion or limitation may not apply to you.

Warranty does not include the expenses related to freight or transportation of parts or compensation for any inconvenience or loss of use while being repaired. A copy of the original invoice must accompany all warranty claims.

Warranted replacement parts will be returned freight collect.

## – INSTALLATION IMAGES –

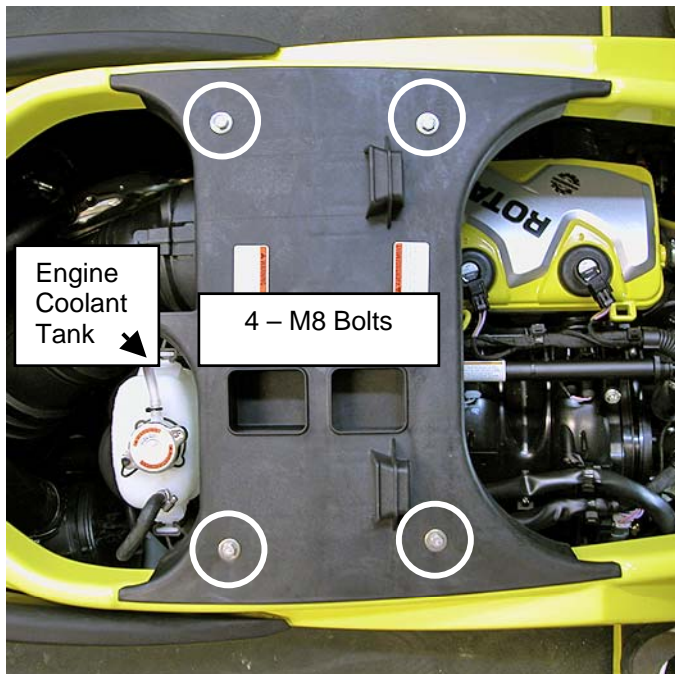


Illustration 1



Illustration 2

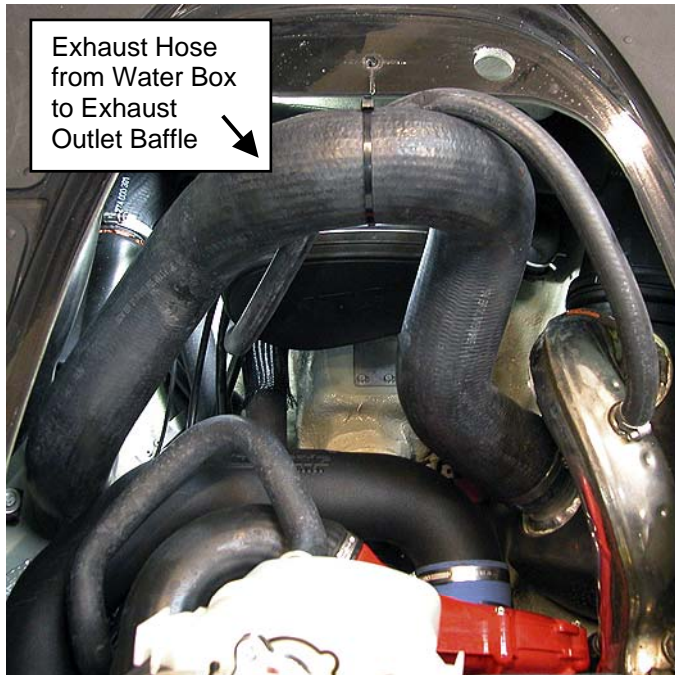


Illustration 3



Illustration 4

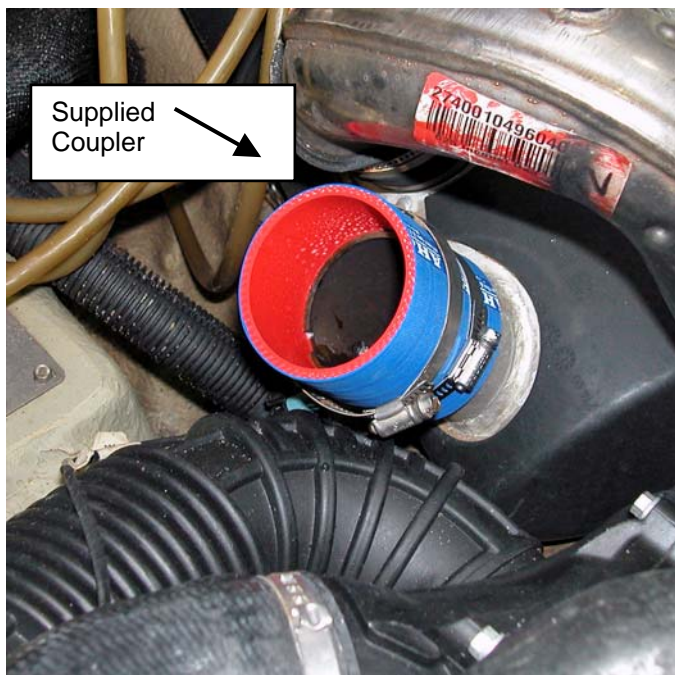


Illustration 5

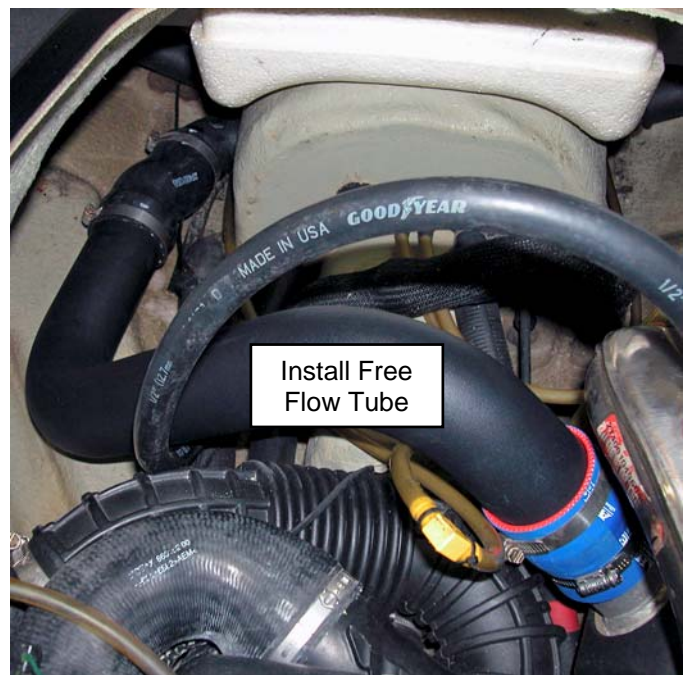


Illustration 6