

3671 North Dixie Highway * Pompano Beach * FL * 33064 * (954) 785-4820 * (954) 785-2535 [FAX]
Riva Yamaha On Line: http://www.rivayamaha.com

Installation Instructions for Riva Yamaha Carburetor Adapters

Riva Part #	Yamaha Part #	Application
RY1338-I	(MWV-ADAPT-38-MM)	All Yamaha type 38mm Mikuni carburetors
RY1338	(N/A)	Yamaha type 38mm Mikuni carburetors w/o oil injection
RY1344-I	(MWV-ADAPT-44-MM)	All Yamaha type 44mm Mikuni carburetors
RY1344	(N/A)	Yamaha type 44mm Mikuni carburetors w/o oil injection
RY1346	(N/A)	Yamaha type 46mm Mikuni carburetors w/o oil injection

> NOTE- This is a Yamaha racing component. It is designed for competition only. Failures caused by the use of this component are not covered by the Yamaha limited warranty.

WARNING. Gasoline is highly flammable and explosive. Handle with special care. ***NO SMOKING***

1 Disconnect battery cables from battery, turn fuel cock off.

2 Remove bolts holding stock flame arrestor in place and remove cover.

3 Remove the stock flame arrestor(s) and disconnect the oil injection lines (on models equipped with oil injection systems, "autolube"). Cap off lines to prevent oil leakage. CAUTION, take care not to drop screws, bolts, etc. into carburetor body.

4A For "autolube" equipped models only, install the supplied oil injection fitting(s) to the adapter body. Do Not over tighten.

4B For models not equipped with "autolube" systems, install the block-off plug(s) supplied.

5 Install the adapter(s) onto the carburetor bodies, use permanent thread locker on bolts and torque to 5.8 ft-lbs.

6 For "autolube" equipped models only, install the oil injection lines to the adapter using new tie straps to hold lines in place.

7 Install Riva Flame Arrestor(s) on adapter(s) and tighten flame arrestor clamp to hold flame arrestor(s) in place, Do not over tighten clamp.

8 Check bilge area for tools and any loose lines or fittings. Reattach battery cables and turn fuel cock on.

Installation is now complete. If you have any questions or problems please feel free to contact Riva's technical assistance line, (305)785-4820 ask for technical assistance.

Remember the water belongs to everyone, please ride responsibly.

[Ne: RY1300 SAM, pg.1]



3671 North Dixie Highway * Pompano Beach * FL * 33064 * (954) 785-4820 * (954) 785-2535 [FAX]
Riva Yamaha On Line: http://www.rivayamaha.com

Installation Instructions for Riva Yamaha Carburetor Adapters

Riva Part #	Yamaha Part #	Application
RY1338-I	(MWV-ADAPT-38-MM)	All Yamaha type 38mm Mikuni carburetors
RY1338	(N/A)	Yamaha type 38mm Mikuni carburetors w/o oil injection
RY1344-I	(MWV-ADAPT-44-MM)	All Yamaha type 44mm Mikuni carburetors
RY1344	(N/A)	Yamaha type 44mm Mikuni carburetors w/o oil injection
RY1346	(N/A)	Yamaha type 46mm Mikuni carburetors w/o oil injection

> NOTE- This is a Yamaha racing component. It is designed for competition only. Failures caused by the use of this component are not covered by the Yamaha limited warranty.

WARNING. Gasoline is highly flammable and explosive. Handle with special care. ***NO SMOKING***

1 Disconnect battery cables from battery, turn fuel cock off.

2 Remove bolts holding stock flame arrestor in place and remove cover.

3 Remove the stock flame arrestor(s) and disconnect the oil injection lines (on models equipped with oil injection systems, "autolube"). Cap off lines to prevent oil leakage. CAUTION, take care not to drop screws, bolts, etc. into carburetor body.

4A For "autolube" equipped models only, install the supplied oil injection fitting(s) to the adapter body. Do Not over tighten.

4B For models not equipped with "autolube" systems, install the block-off plug(s) supplied.

5 Install the adapter(s) onto the carburetor bodies, use permanent thread locker on bolts and torque to 5.8 ft-lbs.

6 For "autolube" equipped models only, install the oil injection lines to the adapter using new tie straps to hold lines in place.

7 Install Riva Flame Arrestor(s) on adapter(s) and tighten flame arrestor clamp to hold flame arrestor(s) in place, Do not over tighten clamp.

8 Check bilge area for tools and any loose lines or fittings. Reattach battery cables and turn fuel cock on.
Installation is now complete. If you have any questions or problems please feel free to contact Riva's technical assistance line, (305)785-4820 ask for technical assistance.

Remember the water belongs to everyone, please ride responsibly.