



RIVA/Jettrim Seat Covers with or without Pull Tabs

Applications: All RIVA/Jettrim Seat Covers

Required Tools/ Materials:


Heavy-duty Staple Gun
3/8" Stainless Steel Staples

Part #

N/A
N/A

Before beginning installation determine whether or not your seat cover has "pulls". Pulls are plastic tabs that pull through the seat foam to make the cover better conform to the shape of the foam. See Figure 1 for an example of a cover with pulls. Turn your seat cover upside down and examine it to determine if it has pulls. Follow the instructions below for the correct cover type.

Figure 1

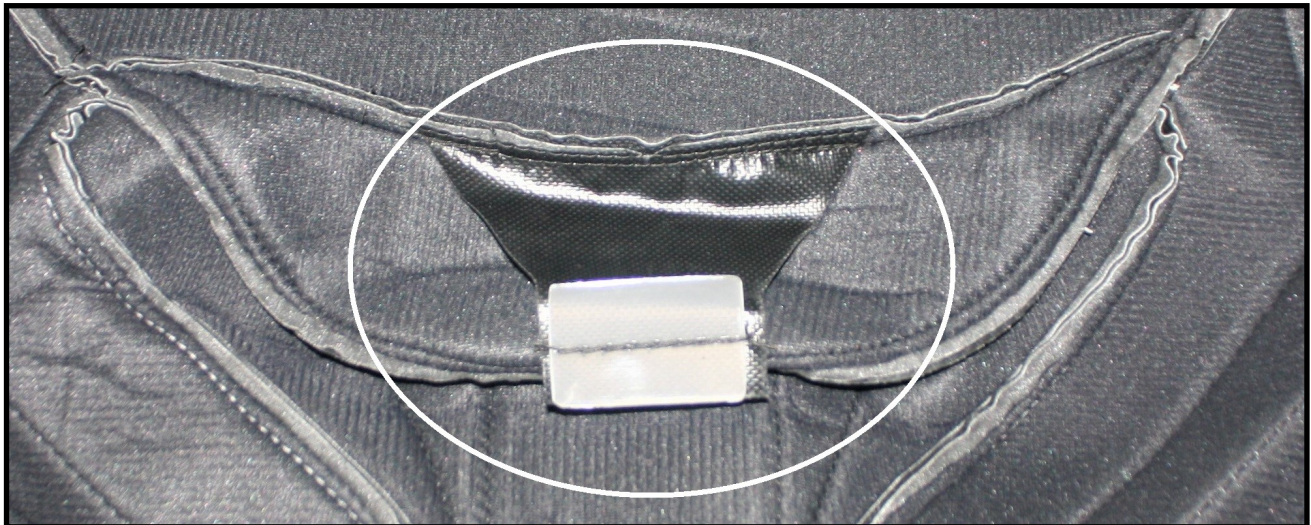

Remember, the water belongs to everyone.

Please ride responsibly and respect the environment!

Technical Support

For answers to questions regarding installation or trouble shooting RIVA Performance Products contact:

RIVA Technical Support directly at (954) 247-0705 or by e-mail at tech_support@rivamotorsports.com.

Limited Warranty

RIVA/Jettrim Seat Covers carry a 90 day limited warranty to the original purchaser. They are warranted to be free of defects in materials and workmanship under normal use and service. Customer modified components will be void of warranty. This warranty is limited to defects in the primary components only. Finish and/or wear marks in or on primary components are not covered under this warranty.

RIVA Racing's liability is expressly limited to the repair or replacement of the components contained within or associated with this kit. RIVA Racing agrees to repair or at RIVA's option, replace any defective unit without charge, if product is returned to RIVA Racing freight prepaid within the warranty period. Any equipment returned which, in RIVA's opinion, has been subjected to misuse, abuse, overheating or accident shall not be covered by this warranty.

RIVA Racing shall have no liability for special, incidental or consequential damages or injury to persons or property from any cause arising from the sale, installation or use of this product.

No other warranty, express or implied, including, but not limited to the implied warranties of merchantability and fitness for a particular purpose, applies. Various states do not allow for the limitation of incidental or consequential damages and therefore the above exclusion or limitation may not apply to you.

Warranty does not include the expenses related to freight or transportation of parts or compensation for any inconvenience or loss of use while being repaired. A copy of the original invoice and a Return Authorization Number (RA#) must accompany all warranty claims.

Warranted replacement parts will be returned freight collect.

- INSTALLATION INSTRUCTIONS -

RIVA/ Jettrim Seat Covers with pulls

1. Remove stock seat cover completely.
2. You may have to separate foam from seat tray.
3. Waterproof seat foam with plastic. (trash bag works well)
4. Poke holes through foam where pull tabs go.
5. Align seat cover on seat.
6. Push tabs through holes in foam.
7. If you separated the foam from the tray place it back on the tray now.
8. Lay your RIVA/JETTRIM cover over the seat.
9. Find the center point in front of your seat. Match it to the center of your seat cover. Using your staple gun, apply 4 to 5 staples into what is called the "listing". The listing simply is the material that runs around the whole outside perimeter of you seat cover and where your staples are applied.
10. Move to the front corners of your seat and staple to secure each corner while keeping in mind the stretch factor.
11. Move to the rear of your seat and stretch your seat cover over the back. Stretching is very important, so take your time to insure proper installation.
12. After you have properly stretched your seat cover, secure it by stapling the center then the rear corners of your seat cover.
13. Move back to the front of your seat again, focusing on the wings (bottom front part of your seat). Stretch evenly from side to side and secure with staples.
14. Secure all of your excess material found in all corners. Just like wrapping a present.
15. Once all the corners are secure, everything else, with minimal stretching will fall into place.
16. Don't be afraid to use extra staples to secure your seat cover.

RIVA/Jettrim Seat covers without pulls.

1. Leave stock cover to insure dryness.
2. Lay your RIVA / Jettrim cover over the seat.
3. Find the center point at front of your seat. Match it to the center of your seat cover.
4. Using a staple gun, apply 4 to 5 staples into what is called the "listing" (The material that runs around the whole outside perimeter of you seat cover and where your staples are applied).
5. Move to the front corners of your seat and staple to secure each corner while keeping in mind the stretch factor.
6. Move to the rear of your seat and stretch your seat cover over the back. Stretching is very important, so take your time to insure proper installation.
7. After you have properly stretched your seat cover, secure it by stapling the center and then the rear corners of your seat cover.
8. Return to the front of your seat again, focusing on the wings (bottom front part of your seat). Stretch evenly from side to side and secure with staples.
9. Secure all of your excess material found in all corners. *Just like wrapping a present!*
10. Once the corners are secured everything else, with minimal stretching, will fall into place.
11. Don't be afraid to use extra staples to secure your seat cover.