



**SuperJet Handle Pole Spring**  
**PART #'s RY 1024-1**  
INSTALLATION INSTRUCTIONS



**NOTE:** When using Blowsion lowered brackets, you will need to cut 3/8" inch from area noted

**REMOVING THE OE SPRING:**

1. Remove hood.
2. Lock handle pole in the up position.
3. Remove the two Phillips screws holding the handle pole end cap in place.
4. Remove the lock nut and washer from handle pole pivot bolt.
5. Loosen pivot bolt and remove using a combination of unscrewing (counter clockwise) and tapping the end of the threaded end with a flat punch. **NOTE: Be careful not to damage the threads, rubber boot and components within.**
6. Remove the stock handle pole spring(s).

**INSTALLING THE RIVA SPRING:**

7. Install the RIVA Handle Pole Spring into the inside of handle pole behind the steering cable and electrical wire bundle so that both spring ends are pointing down, passing through the OE spring groove.
8. Lubricate the OE pivot bolt and install into handle pole bracket, handle pole and through the handle pole spring coil as far as possible. Then, using a mallet, gently tap the end of pivot bolt until it touches the other side of handle pole. **NOTE: Use the top of handle pole for leverage to guide pivot bolt when installing. Be careful not to damage threads on pivot bolt.**
9. Thread pivot bolt through handle pole and into bracket. Tighten until snug, but not restricting handle poles movement.
10. Install washer and locknut onto pivot bolt.
11. Install handle pole end cap with the two OE Phillips screws.

**IMPORTANT: Technical Support**

For answers to questions regarding installation or trouble shooting Riva Performance Products contact: Riva's Tech Line at (954) 247-0705, online at [tech\\_support@rivayamaha.com](mailto:tech_support@rivayamaha.com) or you're local Riva Dealer.

**Riva Racing Limited 90-Day Warranty**

Riva Racing Handle Pole Springs carry a 90-day limited warranty to the original purchaser. They are warranted to be free of defects in materials and workmanship under normal use and service. Customer modified components will be void of warranty. This warranty is limited to defects in the primary aluminum components only. Anodized finish and wear marks are not covered under this warranty.

Riva Racing's liability is expressly limited to the repair or replacement. Riva Racing agrees to repair or at Riva's option, replace any defective unit without charge, if product is returned to Riva Racing freight prepaid within the warranty period. Any equipment returned which, in Riva opinion, has been subjected to misuse, abuse, or accident shall not be covered by this warranty.

Riva Racing shall have no liability for special, incidental or consequential damages or injury to persons or property from any cause arising from the sale, installation or use of this product.

No other warranty, express or implied, including, but not limited to the implied warranties of merchantability and fitness for a particular purpose, applies. Various states do not allow for the limitation of incidental or consequential damages and therefore the above exclusion or limitation may not apply to you.

Warranty does not include the expenses related to freight or transportation of parts or compensation for any inconvenience or loss of use while being repaired. A copy of the original invoice must accompany all warranty claims.

Warranted replacement parts will be returned freight collect.

**Remember the water belongs to everyone! Please ride responsibly!**